

## 9. Warranty

This product is warranted against defects in manufacturing or materials for a period of two years from the date of purchase. Defects may be corrected by repair, or by replacement of the unit, as the manufacturer sees fit. This warranty may be void if the unit is not operated in accordance with the instructions provided by the manufacturer. The warranty may also be void by the opening of the unit, and/or its partial or total disassembly, without prior factory authorization. Any claim made under this clause shall be directed to the seller, and shall be verified by proof of purchase. The seller will advise the buyer concerning disposition of the unit. The normal procedure shall be for the manufacturer to issue a warranty claim number, and to authorize return of the unit to the factory. Buyer shall bear shipping costs.

Changes reserved

**Emmi Ultrasonic GmbH**  
Gerauer Straße 34  
D-64546 Mörfelden-Walldorf  
Tel.: +49 (0) 6105 / 40 67 94  
www.emmi-ultrasonic.de

Model

Date of Sale

Stamp of Seller

Changes reserved

Technologies®  
**EMAG**  
www.emag-germany.de

ENGLISCH 

## Emmi Ultrasound Humidifier Operating Manual



- Natural humidification process for ideal performance
- 2,2 liter tank
- Ideal for living rooms, bedrooms or offices
- 3 levels of moisture

Thank you for choosing our device. To avoid operating errors, please read the operating manual carefully.

Technologies®  
**EMAG**  
www.emag-germany.de


 **RoHS** **CE**  
(§6Abs.3, ElektroG)

Technologies®  
**EMAG**  
www.emag-germany.de

**CE**

V1<sub>ALP</sub>

## 1. Product Overview

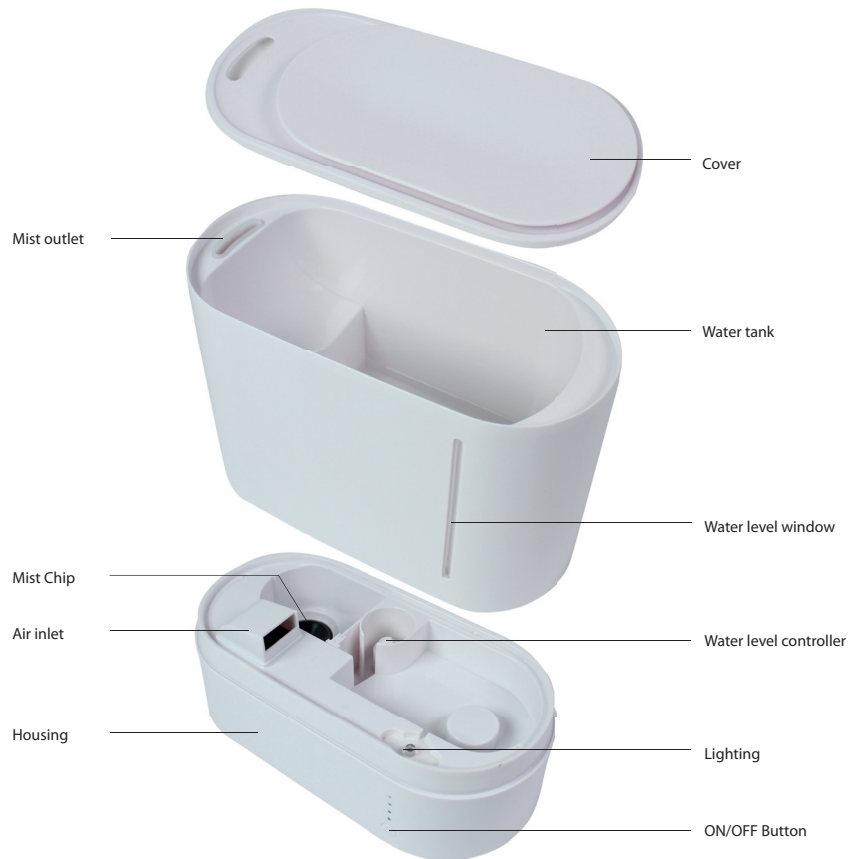

## 2. Function Instruction

1. Open the lid and pour water into the water tank. The water should not exceed the Max water level bar.
2. Replace the lid, place the water tank on the housing and put the plug into the plug socket. After the power indicator lights up white for about 2 seconds, the appliance goes into the stand-by-mode.
3. Press the ON/OFF button and the power indicator will light up white, together with the first LED and the green water level indicator. The appliance will start working in stage 1 (low-mode).
4. Press the button again to switch from level 1 (low-mode) to the stronger level 2 (medium-mode).
5. Press the button once more to switch from level 2 (medium-mode) to level 3 (high-mode).
6. Press the button a fourth time to switch back to stand-by-mode.
7. Press and hold the button for 3 seconds to switch the water level indicator on or off. The water level can be observed at the water level window. The water level indicator is not affected by lack of water or switching off.



- high mode indicator
- medium mode indicator
- low mode indicator
- power indicator
- ON/OFF Button

## 3. Technical Data

Parameter	Humidifier
Length (mm)	250
Wide (mm)	117
Height (mm)	218
Working voltage	AC 100-240V 50/60HZ
Volume (L)	2,2
Power (W)	21

Technical change reserved.

## 4. Note

- When the water level is too low, the operation indicator lights up red.
- When the appliance is carrying water, the operation indicator flashes white.
- When the unit is in operation, it automatically fills water into the water tank of the housing. When the water runs out, the unit automatically stops working.
- If you remove the water tank, the unit no longer produces mist and the operating display lights up red. If it is put back on, it returns to its previous operating state.

## 5. Cleaning information

Turn off the appliance, unplug the power plug and open the lid, pour out the remaining water of the water tank and the housing. Clean the product and the water tank with a clean towel. Cleaning every three days is recommended. The product should also be cleaned when it is not in use.

1. Don't rinse the product with water to prevent the water from damaging the product.

2. Please note that the magnetic surface of the water valve at the bottom of the water tank should be kept clean and avoid the adsorption of foreign bodies. Otherwise, the unit may not function properly or defects may occur.

## 6. Caution

1. Clean tap water or pure water at normal temperature is suitable for this product.
2. Place the product on a horizontal surface before use.
3. Pour the water after use, otherwise bacteria may form.
4. Unplug the product from the power supply if the product is not used for a long period of time.
5. The appliance produces mist, so keep it away from valuable objects.
6. DO NOT operate the unit if there is no water to prevent the unit from working properly.
7. DO NOT pour water directly into the water tank of the housing, especially DO NOT pour water into the air outlet.
8. use contrary to the intended purpose

## 7. Intended use

The product may only be used for the application intended in the catalogues and technical descriptions. Any other use or use beyond this is considered improper use. In the event of improper use, the seller assumes no liability for any damage that may occur and no guarantee for the proper and functional operation of the components. Intended use also includes observing all instructions in the operating manual. This is indicated by the symbol ⚠ on the type plate. The proper and safe operation of the products requires proper transport, storage, installation and assembly as well as careful operation and maintenance. The recurring inspections according to DGUV V3 must be observed. The unit must be installed in such a way that the mains plug is freely accessible at all times.

## 8. Use contrary to intended purpose

If the product is used contrary to the intended purpose, both danger to life and limb and damage to property can occur. For this reason, use contrary to the intended purpose is prohibited. If the product is not used as intended, the seller accepts no liability for any damage that may occur and does not guarantee that the components will work properly and function properly. To prevent improper use of the humidifier, the following instructions must be observed:

- The humidifier may only be operated with the mains voltage specified on, the is printed on the nameplate.
- Do not use flammable or aggressive chemicals (acids, etc.) for cleaning.
- Before cleaning the unit, make sure to unplug the power plug and let the unit cool down.
- If any transport damage is found, do not connect the unit.
- To fill the unit with water, pull the mains plug and make sure that the unit is not placed in water and no water enters the slots in the bottom of the unit.
- The device may only be operated indoors and in a dry environment.
- The unit must not be placed in the hands of children!
- Do not remove the lid during operation and do not reach into the humidifier!
- The appliance must only be used with water or the emmi® room fresheners.